



OptiVision MVP507

MVP507 MHN-LA2000W/842 400V MB SI

OPTIVISION - MASTER MHN-LA - 2000 W - Medium beam

OptiVision is an asymmetric downlighting luminaire that combines compact dimensions with very high efficiency. Available with narrow, medium and wide beams for flexibility in application, it provides excellent control of spill light and limitation of glare and upward leakage of light. OptiVision can accommodate metal-halide lamps for good colour rendering or high-pressure sodium lamps for economical operation. Excellent spill-light control, limitation of glare and upward leakage of light is secured by asymmetric optics that achieve peak intensity at 60° and a sharp cut-off of light at 80°. The MHN-LA/FC lamps guarantee pleasant and natural colour rendering and comfortable atmosphere.

Product data


General Information		Product family code	
Number of light sources	1 [1 pc]	Product family code	MVP507 [OPTIVISION]
Lamp family code	MHN-LA [MASTER MHN-LA]	Operating and Electrical	
Lamp power	2000 W	Lamp supply voltage	400 V [400]
Lamp colour code	842 neutral white	Input Voltage	400 V
Kombipack	Lamp(s) included	Ignitor	SI [Series]
Protection class IEC	Safety class I (I)	Mechanical and Housing	
CE mark	CE mark	Colour	Aluminium
ENEC mark	-	Dimensions (height x width x depth)	NaN x NaN x NaN mm (NaN x NaN x NaN in)
Ball impact resistance mark	Ball Impact Resistance mark	Approval and Application	
Mechanical accessories	No [-]	Ingress protection code	IP65 [Dust penetration-protected, jet-proof]
Optic type outdoor	Medium beam	Mech. impact protection code	IK08 [5 J vandal-protected]
Serviceability class	Class A, the luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge-protection device, optics, front cover and mechanical parts		

OptiVision MVP507


Product Data

Full product code	871155915197700
Order product name	MVP507 MHN-LA2000W/842 400V MB SI
EAN/UPC – product	8711559151977
Order code	910400184712
Local order code	9104-001-84712
SAP numerator – quantity per pack	1

Numerator – packs per outer box	1
SAP material	910400184712
SAP net weight (piece)	17.200 kg



Dimensional drawing

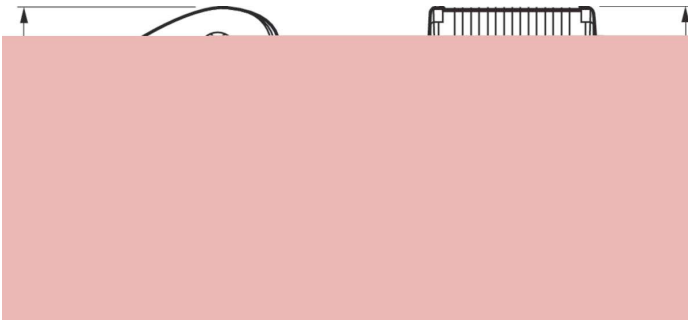

OptiVision MVP507

