



# OptiVision MVP507

## MVP507 MHN-LA2000W/956 400V WB SI

OPTIVISION - MASTER MHN-LA - 2000 W - Wide beam

Optivision is an asymmetric downlighting luminaire that combines compact dimensions with very high efficiency. Available with narrow, medium and wide beams for flexibility in application, it provides excellent control of spill light and limitation of glare and upward leakage of light. Optivision can accommodate metal-halide lamps for good colour rendering or high-pressure sodium lamps for economical operation. Excellent spill-light control, limitation of glare and upward leakage of light is secured by asymmetric optics that achieve peak intensity at 60° and a sharp cut-off of light at 80°. The MHN-LA/FC lamps guarantee pleasant and natural colour rendering and comfortable atmosphere.

### Product data


General Information		Product family code	
Number of light sources	1 [ 1 pc]	Product family code	MVP507 [ OPTIVISION]
Lamp family code	MHN-LA [ MASTER MHN-LA]	Operating and Electrical	
Lamp power	2000 W	Lamp supply voltage	400 V [ 400]
Lamp colour code	956 daylight	Input Voltage	400 V
Kombipack	Lamp(s) included	Ignitor	SI [ Series]
Protection class IEC	Safety class I (I)	Mechanical and Housing	
CE mark	CE mark	Colour	Aluminium
ENEC mark	-	Dimensions (height x width x depth)	NaN x NaN x NaN mm (NaN x NaN x NaN in)
Ball impact resistance mark	Ball Impact Resistance mark	Approval and Application	
Mechanical accessories	No [ -]	Ingress protection code	IP65 [ Dust penetration-protected, jet-proof]
Optic type outdoor	Wide beam	Mech. impact protection code	IK08 [ 5 J vandal-protected]
Serviceability class	Class A, the luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge-protection device, optics, front cover and mechanical parts		

# OptiVision MVP507


## Product Data

Full product code	871155915207300
Order product name	MVP507 MHN-LA2000W/956 400V WB SI
EAN/UPC – product	8711559152073
Order code	910400188812
Local order code	9104-001-88812
SAP numerator – quantity per pack	1

Numerator – packs per outer box	1
SAP material	910400188812
SAP net weight (piece)	17.200 kg



## Dimensional drawing

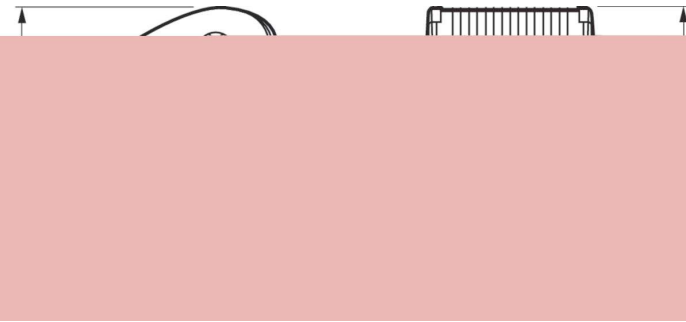

OptiVision MVP507

