



Pacific LED gen4

WT470C LED42S/840 PSU VWB L1300

PACIFIC LED WATERPROOF - 840 neutral white - Power supply unit - Very wide beam - Screw connection with pug and socket

PacificLED gen4 is a highly efficient and reliable LED waterproof luminaire that offers an excellent quality of light, with a uniform light distribution without visible striping or color artefacts. The range offers modular construction to enable ease of upgrade and maintenance. The new optical system provides distortion-free lighting with improved visual guidance, which makes it ideally suited to general industry, warehouses and parking areas. The range also offers the option of multiple optics to ensure an optimized lighting scheme for a wide range of applications. For industrial applications, PacificLED gen4 offers an open product architecture with toolless access to the gear tray and an innovative end-cap design with built-in connector for fast and easy installation. The single-piece mounting clamp ensures no small, loose components which could affect the primary production process.

Product data

General Information			
Beam angle of light source	120 °	Protection class IEC	Safety class I (I)
Lamp colour code	840 neutral white	Glow-wire test	850/5 [Temperature 850 °C, duration 5 s]
Light source replaceable	Yes	Flammability mark	D [For mounting on easily flammable surfaces]
Number of gear units	1 unit	CE mark	CE mark
Driver/power unit/transformer	PSU [Power supply unit]	ENEC mark	ENEC mark
Driver included	Yes	Warranty period	5 years
Optic type	VWB [Very wide beam]	Remarks	* - According to the Lighting Europe guidance paper 'Evaluating performance of LED based luminaires - January 2018': statistically there is no relevant difference in lumen maintenance between the B50 and, for example, the B10. Therefore, the median
Luminaire light beam spread	120° x 120°		
Connection	SI-PS [Screw connection with pug and socket]		
Cable	-		

Pacific LED gen4

	useful life (B50) value also represents the B10 value.
Constant light output	No
Number of products on MCB (16 A type B)	32
EU RoHS compliant	Yes
Product family code	WT470C [PACIFIC LED WATERPROOF]
Unified glare rating CEN	25

Light Technical

Flickering	1
Stroboscopic effect	0.4

Operating and Electrical

Input Voltage	220-240 V
Input frequency	50 to 60 Hz
Inrush current	15.1 A
Inrush time	0.23 ms
Power factor (min.)	0.98

Controls and Dimming

Dimmable	No
----------	----

Mechanical and Housing

Housing material	Polycarbonate
Reflector material	-
Optic material	Polycarbonate
Optical cover/lens material	Polycarbonate
Fixation material	Steel
Optical cover/lens finish	Clear
Overall length	1321 mm
Overall width	96 mm
Overall height	108 mm
Colour	White
Dimensions (height x width x depth)	108 x 96 x 1321 mm (4.3 x 3.8 x 52 in)

Approval and Application

Ingress protection code	IP66 [Dust penetration-protected, jet-proof]
-------------------------	-----------------------------------------------

Mech. impact protection code	IK08 [5 J vandal-protected]
------------------------------	------------------------------

Initial Performance (IEC Compliant)

Initial luminous flux (system flux)	4200 lm
Luminous flux tolerance	+/-7%
Initial LED luminaire efficacy	138 lm/W
Lamp colour temperature	4000 K
Colour Rendering Index	>80
Initial chromaticity	(0.38, 0.38) SDCM <3
Initial input power	30.5 W
Power consumption tolerance	+/-11%

Over Time Performance (IEC Compliant)

Control gear failure rate at median useful life 50,000 h	5 %
Control gear failure rate at median useful life 100,000 h	10 %
Lumen maintenance at median useful life* 50,000 h	L90

Application Conditions

Ambient temperature range	-25 to +45 °C
Performance ambient temperature Tq	25 °C
Suitable for random switching	Not applicable


Product Data

Full product code	871869637943100
Order product name	WT470C LED425/840 PSU VWB L1300
EAN/UPC – product	8718696379431
Order code	910925863821
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
SAP material	910925863821
SAP net weight (piece)	2.610 kg




Pacific LED gen4

Dimensional drawing

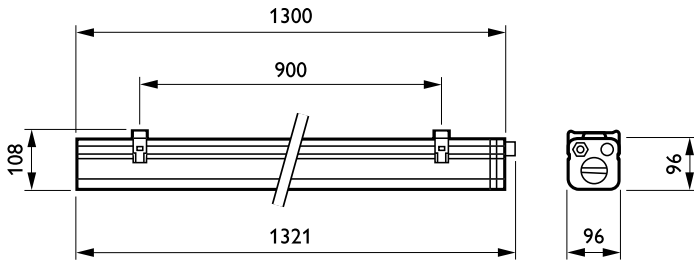

WT470C LED42S/840 PSU VWB L1300

Photometric data

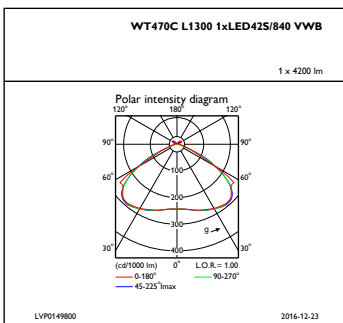

IFPC1_WT470CL13001xLED42S840VWB

