



# MHN-TD



## MHN-TD 150W/730 RX7s 1CT/12

Double-envelope, single- or double-ended Metal halide lamps

### Warnings and Safety

- Use only in totally enclosed luminaire, even during testing (IEC61167, IEC 62035, IEC60598)
- The luminaire must be able to contain hot lamp parts if the lamp ruptures
- Control gear must include end-of-life protection (IEC61167, IEC 62035)
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

### Product data

General Information			
Cap base	RX7S [ RX7s]		color characteristics may change after long accumulate operating time.
Burning Position	P45 [ Parallel +/-45D or Horizontal(HOR)]	<b>Footnotes HID 2</b>	Performance may not be satisfactory unless operated within specified operating positions. (374)
Life to 5% failures (min.)	4000 h		Sphere
Life to 5% failures (nom.)	5000 h		
Life to 20% failures (min.)	6500 h		
Life to 20% failures (nom.)	8000 h		
Life to 50% failures (min.)	8500 h		
Life to 50% failures (nom.)	10500 h		
ANSI code HID	M81/E		
<b>Footnotes HID 1</b>	Color characteristics may vary somewhat from one lamp type to another. Time should be allowed for the lamp to stabilize in color when it is turned on for the first time or if for any reason its operating position is changed. This may require several hours' operation, with more than one start. Lamp color and output may change temporarily if the lamp is subjected to excess vibration or shock. Lamp		
		<b>Light Technical</b>	
		Colour Code	730 [ CCT of 3,000 K]
		Lamp Luminous Flux 25°C EL (Nom)	13400 lm
		Lamp Luminous Flux (Min)	12510 lm
		Lamp Luminous Flux (Nom)	13900 lm
		Colour Designation	Warm white (WW)
		Lumen maintenance 10,000 hours (min.)	50 %
		Lumen maintenance 10,000 hours (nom.)	60 %
		Lumen maintenance 2,000 hours (min.)	69 %
		Lumen maintenance 2,000 hours (nom.)	75 %
		Lumen maintenance 5,000 hours (min.)	58 %

# MHN-TD

Lumen maintenance 5,000 hours (nom.)	65 %
Chromaticity coordinate X (nom.)	0.434
Chromaticity coordinate Y (nom.)	0.398
Colour Temperature, horizontal (Nom)	3000 K
Lamp Luminous Efficacy EM (Min)	81 lm/W
Lamp Luminous Efficacy EM (Nom)	90 lm/W
Colour Rendering Index,horiz (Nom)	67

## Operating and Electrical

Power (Rated) (Nom)	155.0 W
Lamp current run-up (max.)	2.4 A
Lamp current (EM) (nom.)	1.8 A
Ignition supply voltage (max.)	198 V
Ignition peak voltage (max.)	5000 V
Ignition supply voltage (min.)	198 V
Ignition peak voltage (min.)	3500 V
Voltage (Max)	106 V
Voltage (Min)	86 V
Voltage (Nom)	96 V

## Controls and Dimming

Dimmable	No
----------	----

## Mechanical and Housing

Lamp Finish	Clear
Cap-base information	na [-]

Bulb shape	TD
------------	----

## Approval and Application

Energy Efficiency Class	G
Mercury (Hg) content (max.)	18 mg
Mercury (Hg) content (nom.)	18 mg
Energy consumption kWh/1,000 hours	155 kWh
	473287


## Luminaire Design Requirements

Bulb temperature (max.)	650 °C
Pinch temperature (max.)	280 °C

## Product Data

Full product code	871829121534900
Order product name	MHN-TD 150W/730 RX7s 1CT/12
EAN/UPC – product	8718291215349
Order code	928482500092
SAP numerator – quantity per pack	1
Numerator – packs per outer box	12
SAP material	928482500092
SAP net weight (piece)	0.028 kg
ILCOS code	MD/UB-150/730-H-RX7s-25/135.4

## Dimensional drawing

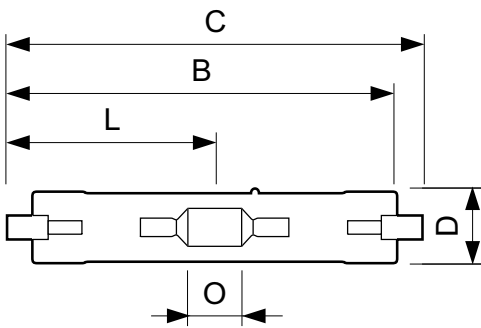


MHN-TD 150W/730 RX7s 1CT/12

Product	D (max)	D	O	C (max)
MHN-TD 150W/730 RX7s 1CT/12	23.0 mm	0.89 in	17.8 mm	135.4 mm

# MHN-TD

## Photometric data

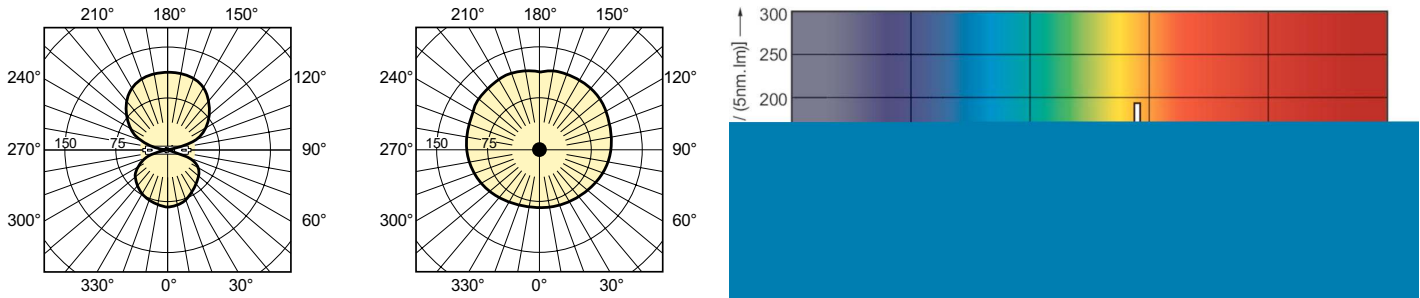

LDLD\_MHN-TD-Light distribution diagram

